
Documents and stickers Attachment Required!

Have the motor vehicle and trailer certificate signed by the respective inspector, stamped by the company and carried in the vehicle.

Required Attach sticker with QR code in the driver's cab, driver's door inside! Easily accessible

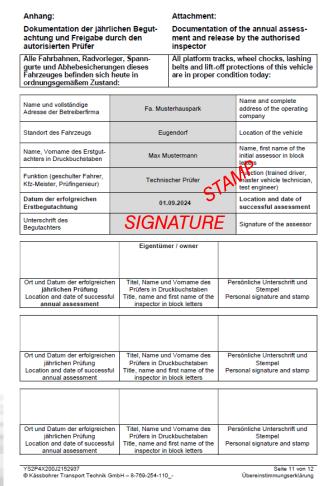



Optional: TÜV sticker visible on the side or rear of the vehicle


TÜV inspection sticker given If only required after 1 year

Follow-up inspections according to national regulations by authorised person or service for load securing and enter them consecutively in the inspection log from page 11.



Page1 | 31.01.2024 ässbohrer Transport Technik GmbH


Homepage Kässbohrer:

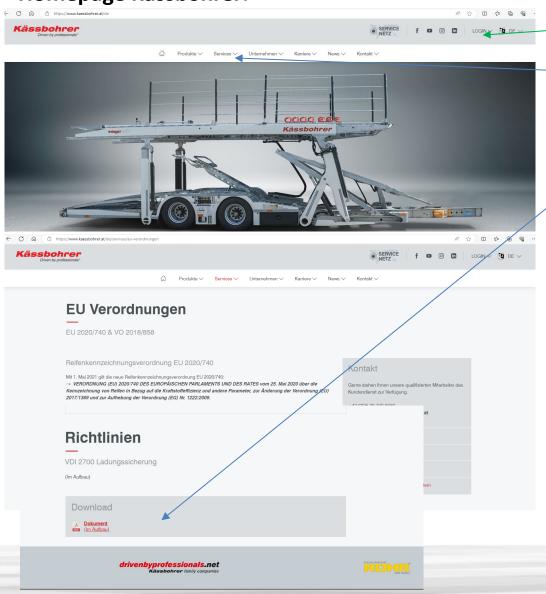

Access via drop-down list at login (load securing) shortcut

Or Service / Regulations Download area for Excel and data sheets

Enter the chassis number of the trailer or lorry to call up the document

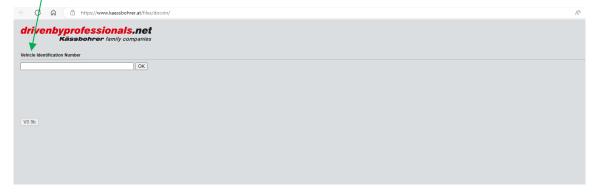

Note: The section Guidelines for load securing VDI2700 is currently under construction! And a status confirmation will be available soon.

